


# RCX221/RCX222

## Robot controller with advanced functions

A 2-axis robot controller with a full range of advanced functions in a compact, space-saving size. Very easy to use.

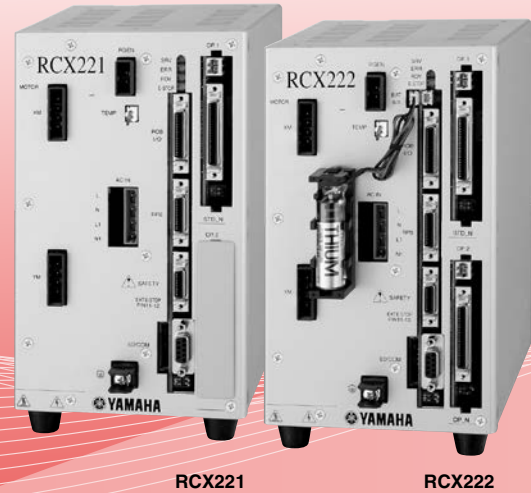

RCX221

RCX222

### Main functions ▶ P.64



Programming box  
▶ RPB/RPB-E  
P.562



Support software for PC  
▶ VIP+  
P.556

### Basic specifications

Item	Model	RCX221	RCX221HP	RCX222	RCX222HP
Basic specifications	Number of controllable axes	2 axes maximum			
	Controllable robots	Single-axis robot FLIP-X, Linear motor single-axis robot PHASER, Cartesian robot XY-X, Pick & place robot YP-X		Single-axis robot FLIP-X, Cartesian robot XY-X, Pick & place robot YP-X	
	Connected motor capacity	2 axes total: 800W or less	2 axes total: 900W to 1200W	2 axes total: 800W or less	2 axes total: 900W to 1200W
	Maximum power consumption	1700VA	2400VA	1700VA	2400VA
	Dimensions	W130 × H210 × D158mm			
Weight	Approx. 2.9kg		Approx. 3.1kg	Approx. 2.9kg	Approx. 3.1kg
Input power supply	Control power supply	Single phase AC200 to 230V +/-10% maximum (50/60Hz)			
	Motor power	Single phase AC200 to 230V +/-10% maximum (50/60Hz)			
Axis control	Drive method	AC full-digital software servo			
	Position detection method	Resolver, Magnetic linear scale		Multi-turn resolver with data backup function	
	Operating method	PTP (Point to Point), Linear interpolation, Circular interpolation, Arch motion			
	Coordinate system	Joint coordinates, Cartesian coordinates			
	Position indication units	Pulses, mm (millimeters), deg (degrees)			
	Speed setting	1% to 100% (In units of 1%. However speed is in units of 0.01% during single-axis operation by DRIVE statement.)			
	Acceleration setting	1. Automatic acceleration setting based on robot model type and end mass parameter 2. Setting based on acceleration and deceleration parameter (Setting by 1% unit)			
	Resolution	1μm		16384 P/rev	
Program	Origin search method	Incremental / Semi-absolute		Absolute / Incremental	
	Program language	YAMAHA BASIC (Conforming to JIS B8439 SLIM Language)			
	Multitasks	8 tasks maximum			
	Sequence program	1 program			
Memory	Point-data input method	Manual data input (coordinate value input), Direct teaching, Teaching playback			
	Memory capacity	364KB (total capacity of program and points) (available program capacity during use of maximum number of points is 84KB)			
	Programs	100 program 9,999: maximum lines per program		98KB: maximum capacity per program	
	Points	10,000 points : maximum numbers of points			
	Memory Backup battery	Lithium metallic battery (service life 4 years at 0°C to 40°C)			
Internal flash memory	512KB (ALL data only)				
External memory backup	SD memory card				

Controllable robot	<b>RCX221 ▶ XY-X P.239, FLIP-X P.169, PHASER P.215, YP-X P.427</b>
	<b>RCX222 ▶ XY-X P.239, FLIP-X P.169, YP-X P.427</b>
CE marking	Field networks
	CC-Link DeviceNet Ethernet PROFIBUS

Model Overview		
Name	RCX221/RCX221HP	RCX222/RCX222HP
Controllable robot	Cartesian robot XY-X / Single-axis robot FLIP-X / Linear motor single-axis robot PHASER/ Pick & place robot YP-X	Cartesian robot XY-X / Single-axis robot FLIP-X / Pick & place robot YP-X
Power	Single phase: AC200V to 230V +/-10% maximum (50/60Hz)	
Operating method	Programming / Remote command / Operation using RS-232C communication	
Maximum number of controllable axes	2 axes maximum	
Origin search method	Incremental/Semi-absolute	Absolute/Incremental

### RCX221/RCX221HP

Controller <sup>Note 1</sup>	Usable for CE	Regenerative unit <sup>Note 2</sup>	Input/Output Selection 1	Input/Output Selection 2
RCX221	No entry: Standard E: CE marking	No entry: None R: RG2	N: NPN P: PNP CC: CC-Link DN: DeviceNet <sup>TM</sup> PB: PROFIBUS EN: Ethernet YC: YC-Link <sup>Note 3</sup>	No entry: None N1: OP.DIO24/16 (NPN) P1: OP.DIO24/16 (PNP) EN: Ethernet <sup>Note 4</sup>
RCX221HP	No entry: Standard E: CE marking	No entry: None R: RG2	N: NPN P: PNP CC: CC-Link DN: DeviceNet <sup>TM</sup> PB: PROFIBUS EN: Ethernet YC: YC-Link <sup>Note 3</sup>	No entry: None N1: OP.DIO24/16 (NPN) P1: OP.DIO24/17 (PNP) EN: Ethernet <sup>Note 4</sup>

Note 1. Driver selection and regenerative unit selection depends on the robot type. See Specification selection table on following page.  
 Note 2. The regenerative unit (option) is required when operating a model designated by YAMAHA or a load with a large inertia.  
 Note 3. Available only for the master.  
 Note 4. Only when you have selected CC, DN or PB for Input/Output selection 1, you can select EN for Input/Output selection 2.

### RCX222/RCX222HP

Controller <sup>Note 1</sup>	Usable for CE	Regenerative unit <sup>Note 2</sup>	Input/Output Selection 1	Input/Output Selection 2
RCX222	No entry: Standard E: CE marking	No entry: None R: RG2	N: NPN P: PNP CC: CC-Link DN: DeviceNet <sup>TM</sup> PB: PROFIBUS EN: Ethernet YC: YC-Link <sup>Note 3</sup>	No entry: None N1: OP.DIO24/16 (NPN) P1: OP.DIO24/17 (PNP) EN: Ethernet <sup>Note 4</sup>
RCX222HP	No entry: Standard E: CE marking	No entry: None R: RG2	N: NPN P: PNP CC: CC-Link DN: DeviceNet <sup>TM</sup> PB: PROFIBUS EN: Ethernet YC: YC-Link <sup>Note 3</sup>	No entry: None N1: OP.DIO24/16 (NPN) P1: OP.DIO24/17 (PNP) EN: Ethernet <sup>Note 4</sup>


Note 1. Driver selection and regenerative unit selection depends on the robot type. See Specification selection table on following page.  
 Note 2. The regenerative unit (option) is required when operating a model designated by YAMAHA or a load with a large inertia.  
 Note 3. Available only for the master.  
 Note 4. Only when you have selected CC, DN or PB for Input/Output selection 1, you can select EN for Input/Output selection 2.

Item	Model	RCX221	RCX221HP	RCX222	RCX222HP	
External input/output	STD.DIO	I/O input	Dedicated input 10 points, General input 16 points			
		I/O output	Dedicated Output 12 points, General output 8 points			
	SAFETY	Emergency stop input (Relay contact), Service mode input (NPN/PNP specification is set according to STD. DIO setting)				
	Brake output	Relay contact				
	Origin sensor input	Connectable to DC 24V normally-closed contact sensor				
	External communications	RS232C: 1CH D-SUB9 (female) RS422 : 1CH (RPB)				
	Options	Slots	2 (inc.STD.DIO)			
		Type	STD.DIO (NPN/PNP): Dedicated input 10 points, Dedicated output 12 points, General input 16 points, General output 8 points Optional input/output (NPN/PNP): General input 24 points / General output 16 points			
			CC-Link: Dedicated input 16 points, Dedicated output 16 points, General input 96 points, General output 96 points (4 nodes occupied)			
			DeviceNet <sup>TM</sup> : Dedicated input 16 points, Dedicated output 16 points, General input 96 points, General output 96 points			
PROFIBUS: Dedicated input 16 points, Dedicated output 16 points, General input 96 points, General output 96 points Ethernet: IEEE802.3 10Mbps (10BASE-T)						
Options	Programming box	RPB, RPB-E (with enable switch)				
	Support software for PC	VIP+ / VIP				
General specifications	Operating temperature	0°C to 40°C				
	Storage temperature	-10°C to 65°C				
	Operating humidity	35% to 85%RH (non-condensing)				
	Absolute backup battery	-			Lithium metallic battery 3.6V 5400mAh (2700mAh × 2)	
	Absolute data backup period	-			1 year (in state with no power applied)	
	Noise immunity	IEC61000-4-4 Level3				
Protecting structure	IP10					


Articulated robots  
 YA  
 Linear motor modules  
 LCM100  
 Compact single-axis robots  
 TRANSERVO  
 Single-axis robots  
 FLIP-X  
 Linear motor single-axis robots  
 PHASER  
 Cartesian robots  
 XY-X  
 SCARA robots  
 YK-X  
 Pick & place robots  
 YP-X  
 CLEAN  
 CONTROLLER INFORMATION  
 Robot positioner  
 Pulse string driver  
 Robot controller  
 I/V/V/V2 Electric gripper  
 Option

## Dimensions


### RCX221

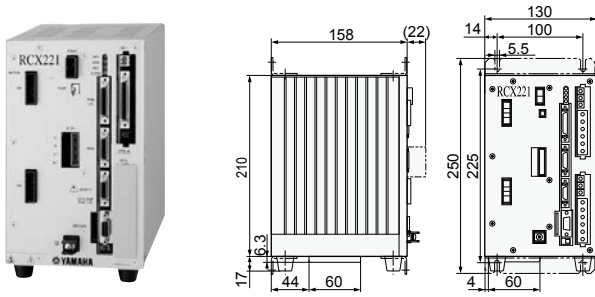


### RCX221HP

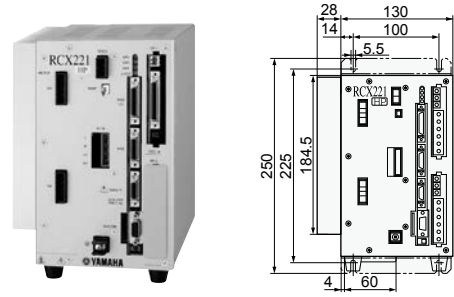


### RCX222

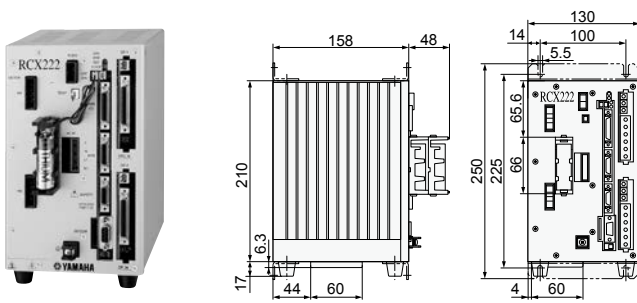

### RCX222HP

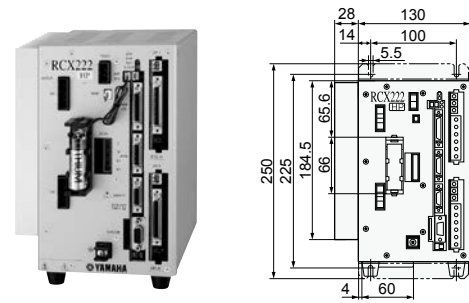


## Part names

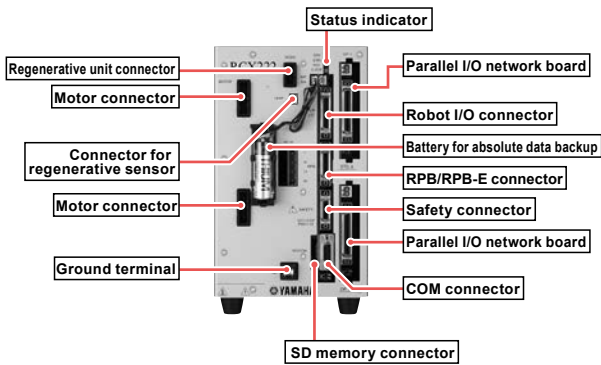

Note. Photograph shows RCX222. The component names on the RCX221 are the same but it does not come with an absolute backup battery.

## Regenerative unit RG2

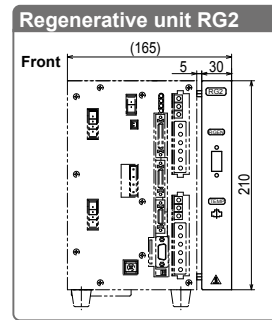

Note. Depth (D) is 158mm.  
Installs on the right side of the RCX221 (HP), RCX222 (HP).  
Cannot be installed as a separate unit.

## Basic specifications

Item	RG2
Model	KAS-M4130-00 (including cable supplied with unit)
Dimensions	W35 × H210 × D158mm
Weight	0.8kg
Regenerative voltage	Approx. 380V or more
Regenerative stop voltage	Approx. 360V or less
Accessory	Cable for connection with controller (300mm)

Note. Installs on the right side of the RCX221 (HP), RCX222 (HP). Cannot be installed as a separate unit.

## Specification selection table

The robot type automatically determines the normal specifications or HP specifications.

### RCX221/RCX221HP

	PHASER						
	MR12D	MF7D	MF15D	MF20D	MF30D	MF50D	MF75D
RCX221	●	●	●	●	●	●	●
RCX221HP	●	●	●	●	●	●	●
Regenerative unit R (RG2)	No entry (None)	●	●	●	●	●	●

● : Applicable

### RCX222/RCX222HP

	FLIP-X	XY-X										YP-X	Clean								
		Arm type, Gantry type, Moving arm type, Pole type					XZ type														
	N15D	N18D	PXYx	FXYx	FXyBx	SXYx	SXYBx	NXY	MXyX	HXYx	HXYLx	SXYx (ZF)	SXYx (ZFL20)	SXYBx (ZF)	SXYBx (ZFL20)	MXyX	HXYx	YP220BX	YP320X	SXYxC	
RCX222	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
RCX222HP	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
Regenerative unit R (RG2)	No entry (None)	●	●	●	●	●	○	●	●	●	●	●	●	●	●	●	●	●	●	●	●
	●	●	●	●	●	●	○	●	●	●	●	●	●	●	●	●	●	●	●	●	●

● : Applicable ○ : Select per conditions

## Power capacity

Required power supply capacity varies according to the robot type and number of axes. Prepare a power supply using the following table as a general guide.

### When connected to 2 axes (Cartesian robot or multi-axis robot)

Axial current sensor value		Power capacity (VA)
X axis	Y axis	
05	05	500
10	05	700
10	10	900
20	05	1500
20	10	1700
20	20	2000
20	20	2400 (HP)

Note. Even if axial current sensor values for each axis are interchanged no problem will occur.

### Motor capacity vs. current sensor table

Connected motor capacity	Current sensor
100W or less	05
200W	10
400W or more	20


Note. Motor output of the B14H is 200W but the current sensor is 05.

## Conditions where regenerative unit is needed on multi robots


- Motor capacity exceeds a total of 450W.
- Motor capacity for perpendicular axis exceeds a total of 240W.
- The following conditions apply when perpendicular axis capacity is 240W or less.
  - perpendicular axis is 200W.
  - perpendicular axis is 100W and stroke is 700mm or more.
  - there are 2 perpendicular axes at 100W, and includes leads of 5mm.
- B14H which maximum speed exceeds 1250mm per second.

## Installation conditions


- Install the RCX221/RCX222 inside the control panel.
- Install the RCX221/RCX222 on a flat, level surface.
- Install the RCX221/RCX222 in a well ventilated location, with space on all sides of the RCX221/RCX222 (See fig. at right.).
- Do not block the heat-sink on the side panel.
- Do not block the fan on the bottom of the controller.
- Ambient temperature : 0 to 40°C
- Ambient humidity : 35 to 85% RH (no condensation)

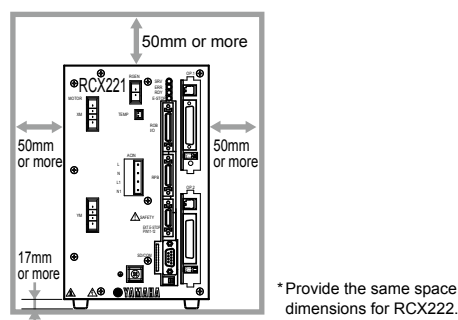



## Example of input signal connection

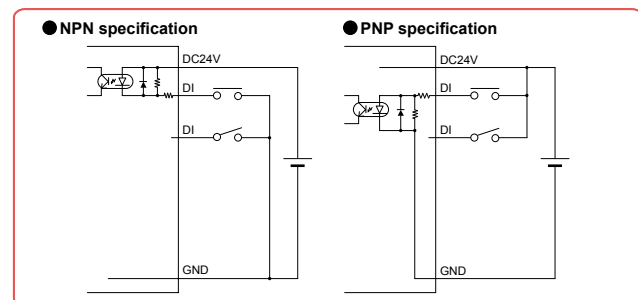

## Example of output signal connection

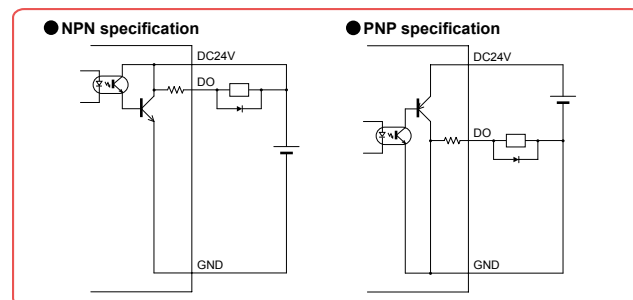

## Emergency input signal connections

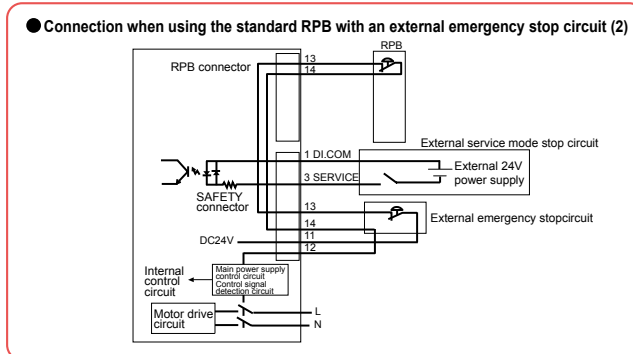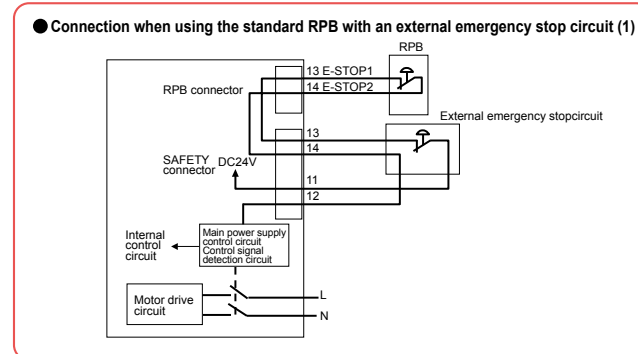

## SAFETY connector signals

Terminal number	I/O No.	Name
1	DI.COM	Dedicated input common
2	INTERLOCK	Interlock signal
3	SERVICE	SERVICE mode input
4	DO.COM	Dedicated output common
5	MPRDY	Main power supply ready
6	SERVO OUT	Servo-on state output
7	NC	No connection
8	KEY1	RPB key switch contact
9	KEY2	RPB key switch contact
10	24VGND	EMG 24V, GND

Terminal number	I/O No.	Name
11	EMG24V	Power supply for emergency stop input
12	EMGRDY	Emergency stop ready signal
13	EMGIN1	Emergency stop input 1
14	EMGIN2	Emergency stop input 2
15	EMGIN3	Emergency stop input 3
16	EMGIN4	Emergency stop input 4
17	LCKIN1	Enable switch input 1
18	LCKIN2	Enable switch input 2
19	LCKIN3	Enable switch input 3
20	LCKIN4	Enable switch input 4

Articulated robots  
YA  
Linear robot modules  
LCM100  
Compact single-axis robots  
TRANSEVO  
Single-axis robots  
FLIP-X  
Linear motor single-axis robots  
PHASER  
Cartesian robots  
XY-X  
SCARA robots  
YK-X  
Pick & place robots  
YP-X  
CLEAN  
CONTROLLER INFORMATION  
Robot positioner  
Pulse string driver  
Robot controller  
N/V/N/2 Electric gripper  
Option

## Standard I/O [connector name: STD. DIO] signal table

Terminal number	Signal name	Name	
		RCX221	RCX222
1	DI01	Servo ON	
2	DI10	Sequence program control	
3	DI03	Step run	
4	CHK1	Check input 1	
5	DI05	I/O command run	
6	DI06	Spare <sup>Note 1</sup>	
7	DI07	Spare <sup>Note 1</sup>	
8	DI20	General input 20	
9	DI21	General input 21	
10	DI22	General input 22	
11	DI23	General input 23	
12	DI24	General input 24	
13	DI25	General input 25	
14	DI26	General input 26	
15	DI27	General input 27	
16	DO00	EMG monitor (emergency stop monitor)	
17	DO01	CPU OK	
18	DO10	AUTO mode	
19	DO11	Return-to-origin complete	
20	DO12	Sequence program in progress	
21	DO13	Auto operation in progress	
22	DO14	Program reset output	
23	DO15	Battery alarm output <sup>Note 2</sup>	
24	DO16	END	
25	DO17	BUSY	
26	DI12	Auto operation start	
27	DI13	AUTO mode switching	
28	DI14	ABS reset (Not in use normally)	Return-to-origin <sup>Note 3</sup>
29	DI15	Program reset	
30	DI16	MANUAL mode	
31	DI17	Return-to-origin (In use normally)	ABS reset <sup>Note 4</sup>
32	DI30	General input 30	
33	DI31	General input 31	
34	DI32	General input 32	
35	DI33	General input 33	
36	DI34	General input 34	
37	DI35	General input 35	
38	DI36	General input 36	
39	DI37	General input 37	
40	CHK2	Check input 2	
41	DO02	Servo-on state	
42	DO03	Alarm	
43	DO20	General output 20	
44	DO21	General output 21	
45	DO22	General output 22	
46	DO23	General output 23	
47	DO24	General output 24	
48	DO25	General output 25	
49	DO26	General output 26	
50	DO27	General output 27	

Note 1. Use of DI06, DI07 is prohibited.

Note 2. DO15 is a memory backup battery voltage drop alarm output.

Note 3. Set origin return for axes using incremental specifications and axes using semi-absolute specifications.

Note 4. Set origin return on axes using absolute specifications.

Area check output can be assigned to DO20 to DO157.

(Area check output assignment differs depending on the controller software version. See the user's manual for details.)

## Option I/O [connector name: OP. DIO] signal table

Terminal number	Signal name	Name
1	–	Spare
2	DI40	General input
3	–	Spare
4	DI41	General input
5	–	Spare
6	–	Spare
7	–	Spare
8	DI50	General input
9	DI51	General input
10	DI52	General input
11	DI53	General input
12	DI54	General input
13	DI55	General input
14	DI56	General input
15	DI57	General input
16	–	Spare
17	–	Spare
18	DO30	General output
19	DO31	General output
20	DO32	General output
21	DO33	General output
22	DO34	General output
23	DO35	General output
24	DO36	General output
25	DO37	General output
26	DI42	General input
27	DI43	General input
28	DI44	General input
29	DI45	General input
30	DI46	General input
31	DI47	General input
32	DI60	General input
33	DI61	General input
34	DI62	General input
35	DI63	General input
36	DI64	General input
37	DI65	General input
38	DI66	General input
39	DI67	General input
40	–	Spare
41	–	Spare
42	–	Spare
43	DO40	General output
44	DO41	General output
45	DO42	General output
46	DO43	General output
47	DO44	General output
48	DO45	General output
49	DO46	General output
50	DO47	General output

Articulated robots  
YA

Linear CONVEYOR modules  
LCM100

Compact single-axis robots  
TRANSEVO

Single-axis robots  
FLIP-X

Linear motor single-axis robots  
PHASER

Cartesian robots  
XY-X

SCARA robots  
YK-X

Pick & place robots  
YP-X

CLEAN

CONTROLLER INFORMATION

Robot positioner

Pulse string driver

Robot controller

IV/V/VZ Electric gripper

Option

## Robot Language Table

### General commands

Language	Function
DECLARE	Declares that a label or sub-procedure is in an external program.
DEF FN	Defines a function that is available to the user.
DIM	Declares the name of an array variable and the number of elements.
EXIT FOR	Terminates a FOR statement to NEXT statement loop.
FOR to NEXT	Controls repetitive operations
GOSUB to RETURN	Jumps to a subroutine with the label specified by a GOSUB statement and executes the subroutine.
GOTO	Unconditionally jumps to the line specified by a label.
HALT	Stops a program and resets it.
HOLD	Pauses a program.
IF	Allows control flow to branch according to conditions.
LET	Executes a specified assignment statement.
ON to GOSU	Jumps to a subroutine with each label specified by a GOSUB statement according to conditions and executes the subroutine.
ON to GOTO	Jumps to each line specified by a label according to conditions.
REM	All characters that follow REM or an apostrophe (') are viewed as comments.
SELECT CASE to END SELECT	Allows control flow to branch according to conditions.
SWI	Switches the currently executed program to a specified program, and executes from the first line after compiling.
WHILE to WEND	Controls repetitive operations.
Label statement	Defines "labels" in program lines.

### Robot operation

Language	Function
ABSRST	Performs return-to-origin along robot absolute motor axes.
DRIVE	Performs an absolute movement of each axis in the main group.
DRIVEI	Performs a relative movement of each axis in the main group.
MOVE	Performs an absolute movement of the main robot axes.
MOVEI	Performs a relative movement of the main robot axes.
ORIGIN	Performs return-to-origin on an incremental mode axis or absolute search on a semi-absolute mode axis.
PMOVE	Performs a pallet movement of the main robot axes.
SERVO	Controls the servo ON/OFF of the specified axes in the main group or all axes (in main group and sub group).

### I/O control

Language	Function
DELAY	Waits for the specified length of time (ms).
DO	Outputs the specified value to the DO ports.
LO	Outputs the specified value to the LO port to prohibit axis movement or permit axis movement.
MO	Outputs the specified value to the MO ports.
OUT	Turns ON the bits of the specified output ports and the command statement ends.
RESET	Turns OFF the bits of the specified output ports.
SET	Turns ON the bits of the specified output ports
SO	Outputs the specified value to the SO port.
TO	Outputs the specified value to the TO port.
WAIT	1. Waits until the condition in DI/DO conditional expression are met. 2. Waits until positioning on the robot axes is complete (within the tolerance range).

### Coordinate control

Language	Function
CHANGE	Switches the hand of the main robot.
HAND	Defines the hand of the main robot.
RIGHTY / LEFTY	Selects whether the main robot will be "right-handed" or "left-handed" when moving to a point specified on a Cartesian coordinate system.
SHIFT	Sets the shift coordinates for the main robot by using the shift data specified by a shift variable.

### Condition change

Language	Function
ACCEL	Changes the acceleration coefficient parameter of the main group.
ARCH	Changes the arch position parameter of the main group.
ASPEED	Changes the automatic movement speed of the main group.
AXWGHT	Changes the axis tip weight parameter of the main group.
DECEL	Changes the deceleration rate parameter of the main group.
ORGORD	Sets the axis sequence parameter to perform return-to-origin and absolute search in the main group.
OUTPOS	Changes the OUT position parameter of the main group.
PDEF	Defines the pallet used to execute a pallet movement command.
SPEED	Changes the program speed for the main group.
TOLE	Changes the tolerance parameter of the main group.
WEIGHT	Changes the tip weight parameter of the main robot.

### Communication control

Language	Function
ONLINE / OFFLINE	Changes communication mode and initialize the communication port.
SEND	Sends the read file data into a write file.

### Screen control

Language	Function
PRINT	Displays the value of specified variable on the MPB/RPB screen.

### Key control

Language	Function
INPUT	Assigns a value to the variable specified from the MPB/RPB.

### Procedure

Language	Function
CALL	Calls up sub-procedures defined by the SUB and END SUB statements.
EXIT SUB	Terminates the sub-procedure defined by the SUB and END SUB statements.
SHARED	Does not permit variables declared with a program written outside a subprocedure (SUB to END SUB) to be passed on as dummy arguments, but allows them to be referred to with a sub-procedure.
SUB to END SUB	Defines a sub-procedure.

### Task control

Language	Function
CHGPRI	Changes the priority of the specified task.
CUT	Terminates a task currently being executed or temporarily stopped.
EXIT TASK	Terminates its own task currently being executed.
RESTART	Restarts a task that is temporarily stopped.
START	Sets the task number and priority of the specified task and starts that task.
SUSPEND	Temporarily stops another task being executed.

### Error control

Language	Function
ON ERROR GOTO	If an error occurs during program execution, this command allows the program to jump to the error processing routine specified by the label without stopping the program, or stops the program and displays the error message.
RESUME	Resumes the program execution after recovery from an error. This command is used in the error processing routine.
ERL	Gives the line number where an error occurred.
ERR	Gives the error code number when an error occurred.

### PATH control

Language	Function
PATH	Sets the PATH motion on the main robot axis.
PATH END	Terminates the path setting for PATH motion.
PATH SET	Starts the path setting for PATH motion.
PATH START	Starts the PATH motion.

### Torque control

Language	Function
DRIVE (with torque limit option)	Executes an absolute movement command on each axis in the main group.
TORQUE	Changes the maximum torque instruction for the specified main group axis.
TRQTIME	Sets the current limit time-out period on the specified main group axis when using a torque limit setting option in the DRIVE statement.
TRQTIME	Sets the current limit time-out period on the specified main group axis when using a torque limit setting option in the DRIVE statement.

Articulated robots  
YA

Linear coordinate robots  
LCM100

Compact single-axis robots  
TRANSEVO

Single-axis robots  
FLIP-X

Linear motor single-axis robots  
PHASER

Cartesian robots  
XX-X

SCARA robots  
YK-X

Pick & place robots  
YP-X

CLEAN

CONTROLLER

INFORMATION

Robot positioner

Pulse string driver

Robot controller

INVA/NV2 Electric gripper

Option

## Accessories and part options

### RCX221/RCX222



#### Standard accessories

- LCC140
- TS-X
- TS-P
- SR1-X
- SR1-P
- RCX221
- RCX222
- RCX240/S
- RCX340

● **Power connector + wiring connection lever**



Model KAS-M5382-00

● **Safety connector**



Model KAS-M5370-00

- RCX221
- RCX222

● **RPB terminator (dummy connector)**

Attach this to the RPB connector during operation with the programming box RPB removed.



Model KAS-M5163-30

- RCX221
- RCX222
- RCX240/S

● **Standard I/O (STD.DIO) connector**



Model KAS-M533G-00

- RCX221
- RCX222

● **Option I/O (OP.DIO) connector**



Model KAS-M533G-10

- RCX221
- RCX222

● **L type stay (for installing front side, rear side.)**

Use to install the controller.



Model KAS-M410H-00

Note. Model No. is for a single bracket (L type stay).  
(Two are required to install one controller.)

- RCX221
- RCX222

● **Absolute battery**

Battery for absolute data back-up.  
(Not included with the RCX221)

● **Basic specifications**

Item	Absolute battery
Battery type	Lithium metallic battery
Battery capacity	3.6V/2,750mAh
Data holding time	About 1 year <sup>Note1</sup> (in state with no power applied)
Dimensions	φ17 × L53mm
Weight <sup>Note2</sup>	22g



Model KAS-M53G0-11

Note 1. When using 2 batteries.  
Note 2. Weight of battery itself.

Note. The absolute battery is subject to wear and requires replacement.  
If trouble occurs with the memory then remaining battery life is low so replace the absolute battery. The battery replacement period depends on usage conditions. But generally you should replace the battery after about 1 year counting the total time after connecting to the controller and left without turning on the power.

- SR1-X
- RCX222
- RCX240/S

**Important**

**Absolute battery installation conditions**

1 to 2 batteries are required for each 2 axes.  
● 1 battery.....Data storage time of approximately 6 months (with no power applied)  
● 2 batteries....Data storage time of approximately 1 year (with no power applied)  
Note. Absolute battery is not required for either of the 2 axes if using incremental or semi-absolute specifications.

● **Battery case**

This is the absolute battery holder.



Model KBG-M5395-00

- SR1-X
- RCX222
- RCX240/S

## Options

### ● Programming box RPB/RPB-E

**P.562**

This device can perform all operations such as manual robot operation, program entry and edit, teaching and parameter settings.



	RPB	RPB-E
Model	KBK-M5110-10	KBK-M5110-00
Enable switch	—	3-position
CE marking	Not supported	Applicable

**RCX221**  
**RCX222**  
**RCX240/S**

### ● Support software for PC VIP+

**P.556**

VIP+ is a simple to use application software that makes tasks such as robot operation, writing-editing programs, and point teaching easy to visually understand.



VIP+ software model	KX0-M4966-00
---------------------	--------------

**RCX221**  
**RCX222**  
**RCX240/S**


### ● Environment

OS	Microsoft Windows 2000 / XP / Vista (32bit / 64Bit) / 7 (32bit / 64Bit)
CPU	Processor that meets or exceeds the suggested requirements for the OS being used.
Memory	Suggested amount of memory or more for the OS being used.
Hard disk	40MB of available space required on installation drive.
Communication method	RS-232C, Ethernet Note. For Ethernet communication, Ethernet unit for RCX series controller is required.
Applicable robot controllers	RCX221 / RCX222 / RCX141 / RCX142 / RCX240 / RCX240S

Note. Microsoft and Windows are registered trademarks of Microsoft Corporation.  
 Note. ADOBE and ADOBE READER are registered trademarks of Adobe Systems Incorporated.  
 Note. Ethernet is a registered trademark of Xerox Corporation.

### ● Data cables

Communication cable for VIP+.  
 Select from USB cable or D-sub cable.

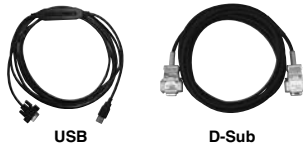

Model	USB type (5m)	KBG-M538F-00
	D-Sub type 9pin-9pin (5m)	KAS-M538F-10

Note. This USB cable supports Windows 2000/XP or later.  
 Note. Data cable jointly used for POPCOM+, VIP+, RCX-Studio Pro.  
 Note. USB driver for communication cable can also be downloaded from our website.

**LCC140**  
**ERCD**  
**SR1-X**  
**SR1-P**  
**RCX221**  
**RCX222**  
**RCX240/S**  
**RCX340**

Articulated robots  
 YA  
 Linear controller modules  
 LCM100  
 Compact single-axis robots  
 TRANSERVO  
 Single-axis robots  
 FLIP-X  
 Linear motor single-axis robots  
 PHASER  
 Cartesian robots  
 XX-X  
 SCARA robots  
 YK-X  
 Pick & place robots  
 YP-X  
 CLEAN  
 CONTROLLER  
 INFORMATION  
 Robot positioner  
 Pulse string driver  
 Robot controller  
 I/V/V/V2 Electric gripper  
 Option